

SHOWTIME

GR-49

SHOWTIME GOLF GRIP INSTALLATION



STEP 1

START BY REMOVING THE OLD GOLF GRIP, AND COMPLETELY CLEANING THE SHAFT OF DIRT AND TAPE.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION



STEP 2

PEEL OFF THE LINER OF DESIGN LABEL, AND APPLY TO THE GOLF SHAFT BUTT END.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION



STEP 3

WHEN THE LABEL IS ALIGNED STRAIGHT ON SHAFT, BEGIN SMOOTHING THE LABEL AROUND THE SHAFT.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION




STEP 4

ONCE LABEL IS SMOOTH AROUND SHAFT, TAKE DOUBLE SIDED ADHESIVE TAPE STRIP AND SMOOTH AROUND LABEL & SHAFT.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION

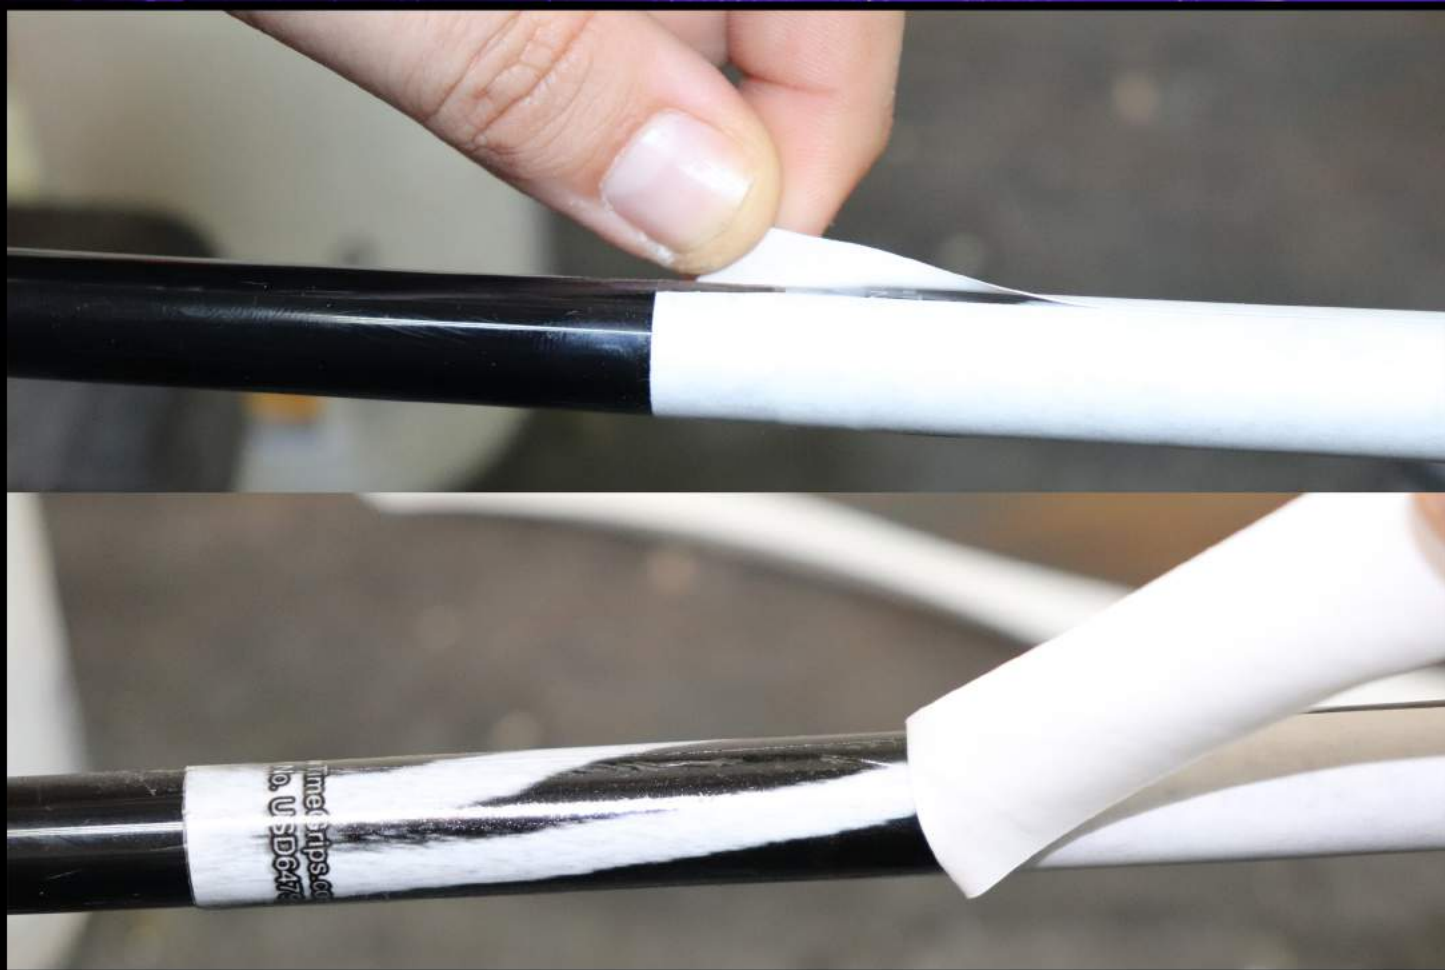

STEP 5

ONCE DOUBLE SIDED TAPE IS SMOOTH AROUND SHAFT, BEGIN REMOVING THE FINAL BACKING SIDE TO EXPOSE THE DESIGN LABEL.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION



STEP 6

APPLY GENEROUS AMOUNTS OF MINERAL SPIRITS TO THE SHAFT AND INSIDE OF THE SHOWTIME GOLF GRIP, EVENLY DISPURSED OVER THE LABEL.

SHOWTIME

USA

SHOWTIME GOLF GRIP INSTALLATION



STEP 7

TAKE SHOWTIME GOLF GRIP AND SLIDE OVER THE SHAFT. COVERING THE DESIGN LABEL COMPLETELY. ALLOW 10 - 15 MINS TO SET AND DRY.

ENJOY YOUR SHOWTIME GRIP